

Footprint

People Counter

Increase Profits

Proven Worldwide

Improve Productivity

Wireless Transmitter Unit

The Wireless Transmitter unit is designed to make life easy for you. Now there is no need to run a 3 wire cable from the Door Sensor back to the RCU4 next to your computer in the back office. Simply connect the Wireless Transmitter to the Beam Sensor and plug the Plug Pack into the nearest power point and you are done.

Note: Only operates in conjunction with the RCU4RX Unit.

Transmitter size:

140mm high 60mm wide 30mm deep

Aerial length is 155mm


- **Easy Installation**
- **No running long cables**
- **Individually programable**



Advanced features at a Realistic price

Each Transmitter can be individually programmed.

Have up to 4 separate Wireless Transmitter unit to one RCU4RX.

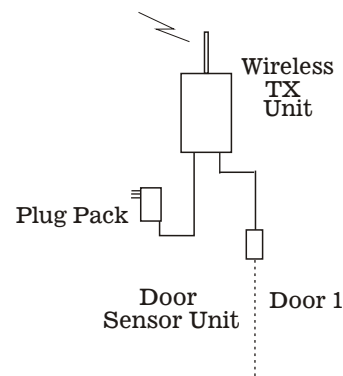

Further information contact Richard Conroy E-mail: especs@southnet.co.nz



ELECTRONIC SPECIALISTS

73 Deveron Street P.O. Box 1759 Invercargill New Zealand
Ph. 03 218 2515 www.electronic-specialists.co.nz Fax 03 218 2454

Wireless Transmitter.cdr